

# Battery Free Universal Remote

Operating Manual



## 1. Preparations for using

1. Please fully charge generator at the beginning.
2. LED marked as "⚡" will be case recharging is complete.



3. Please charge generator on occasions.

## 2. Operating Guide

1. The Numbers of times for full recharging of generator : 50 times.
2. The available times after full recharging : About 1,000 times.
3. The avail days after full recharging : About 7 days.

## 3. Programming Your Device(s)

### Set up TV

1. Turn on TV.



2. Press [TV] button and [OK/SEL] button together until the LED marked as "⚡" is on.



 
3. Enter the 3 digit codes from brand list page 6 to 19.

(If TV does not turn off, enter another 3 digit codes from the same brand.)

For example, if 3 digit codes is "105" press "1", "0", "5" in turn.



4. If TV turns off, press [OK/SEL] button.  
The LED marked as "⚡" will blink 3 times and go out.



Note:

If TV doesn't work properly, repeat step 1 to step 4 until all buttons work properly.

#### Set up AUDIO and TAPE

Press[AUX] button and [OK/SEL] button together until the LED marked as "⚡" is on. Then enter the 3 digit codes from brand list page 30 to 31. If your device turns off, press [OK/SEL] button.

#### Set up DVD, VCR, CBL, SAT

It is same as TV method, Press device button you wish to program and [OK/SEL] button together until the LED marked as "⚡" is on. Then enter the 3 digit codes from brand list page 18 to 30. If your device turns off, press [OK/SEL] button.

### 4. Power-Scan method

#### Set up TV

1. Turn on TV.



2. Press [TV] button and [OK/SEL] button together until the LED marked as "⚡" is on.



3. Press & release [PR+] button repeatedly until TV turns off.  
([PR-] button will power-scan in inverse order)



4. If TV turns off, press [OK/SEL] button.  
The LED marked as "⚡" will blink 3 times and go out.



Note:

If TV doesn't work properly, repeat step 1 to step 4 until all buttons work properly.

#### Set up AUDIO and TAPE

Press[AUX] button and [OK/SEL] button together until the LED marked as "⚡" is on. Then press & release [PR+] button repeatedly until your device turns off. If your device turns off, press [OK/SEL] button.

#### Set up DVD, VCR, CBL, SAT

It is same as TV method, Press device button you wish to program and [OK/SEL] button together until the LED marked as "⚡" is on. Then press & release [PR+] button repeatedly until your device turns off. If your device turns off, press [OK/SEL] button.

### 5. Volume Control Punch Through

Note:

User can control [MUTE], [VOL+] & [VOL-] without a change of device.


For example, if you want to control [MUTE], [VOL+] & [VOL-] of TV when you watch SAT broadcasting.

#### Set up

1. Press [SAT] button and [OK/SEL] button together until the LED marked as "⚡" is on.



2. Press and release [VOL+] button. The LED marked as "⚡" will blink 1 time and is on.

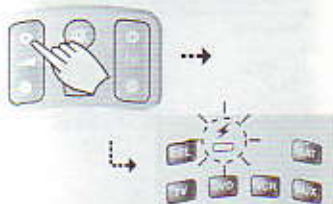


3. Press [TV] button. The LED marked as "⚡" will blink 3 times and go out.



### Reset

1. Press [SAT] button and [OK/SEL] button together until the LED marked as "⚡" is on.

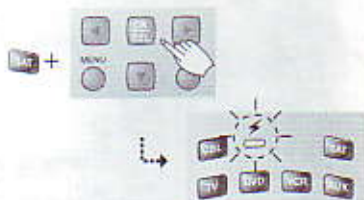

2. Press and release [VOL+] button. the LED marked as "⚡" will blink 1 time and is on.



3. Press [SAT] button. The LED marked as "⚡" will blink 3 times and go out.



## 6. Charger manual

### Note:

In case remote control does not work, rotate the wheel clock wise (as to arrow direction).

In case recharging is complete, LED marked as "⚡" will light up while rotating the wheel.



### Note:

When you purchase remote control, rotate the wheel over 50 times.