 



**morphy richards®**

***Energy conscious iron with no compromise on performance***

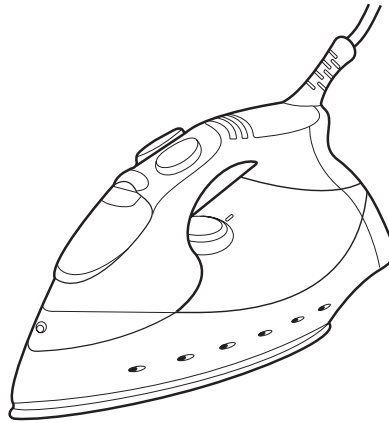

**ecolectric  
Turbo Steam Iron**

 Please read and keep these instructions

***The iron that not only does a good job...***

 
*Our ecolectric iron has a ceramic coated soleplate for smoother gliding, powerful steam for better results and a 400ml water tank for longer ironing between refills.*

***...it helps you do your bit to save the planet***

*It switches off after it's not been used for three minutes - to prevent wasting energy. Little things like that really make a difference.*

***Meet the family***

*Every product in the ecolectric family is packaged in materials that are both recycled and 100% recyclable. Naturally, that makes them better for the environment.*

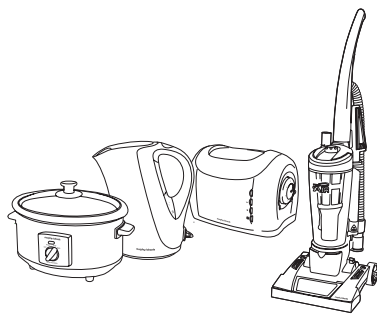

For replacement parts, help with using your Morphy Richards product, problems and lots more, contact us by phone or through our website.

RN40652 MUK Rev 1

 UK Helpline: 0844 871 0953  
Replacement Parts: 0844 873 0719  
Ireland Helpline: 1800 409 119

[www.morphyrichards.com](http://www.morphyrichards.com)

## GETTING THE BEST FROM YOUR NEW IRON

**Safety first:** Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.

**Jet cleaning:** Your iron will give the best ironing results and will last longer if you apply jet cleaning after each period of ironing.

**Useful tip:** If clothes are wrinkled, hang them around the bathroom while you take a hot shower. When you're done, the steam will have worked wonders on the wrinkles and you'll use far less energy ironing them.

## IMPORTANT SAFETY INSTRUCTIONS

### Location

- Do not use outdoors.
- The iron must be used and rested on a stable surface.

### Children

- Close supervision is necessary when any appliance is used near children.
- Children do not understand the dangers associated with operating electrical appliances.
- Children should be supervised to ensure that they do not play with this appliance.

### Personal safety

- **WARNING: To protect against the risk of electric shock, do not put the appliance in water or in any other liquid.**

- **WARNING: Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down, there may be hot water in the water tank.**

- Do not use the vertical steam feature on clothes that are being worn.
- Do not leave the iron unattended whilst plugged in or on an ironing board. Never allow the mains lead to over hang the work surface.
- The socket should always be off before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead, grasp plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around the iron before storing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

 
### Other safety considerations

- Use the iron only for its intended use.
- Always disconnect the iron from the electrical socket when filling with water or emptying, and when not in use.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.

- Do not operate the iron with a damaged cord or if the iron has been dropped or if there are visible signs of damage, or if it is leaking. To avoid the risk of electric shock, do not disassemble the iron, but telephone Morphy Richards for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.

## Special instructions

- If your iron does not work, check the following points:
  - Has the temperature control been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance).
- **WARNING: When not in use, your iron should never be placed flat and left on an ironing board.**
- To prevent damage to the textile being ironed, follow the temperature guide carefully. (Test the inside of the hem of the garment).
- When ironing is complete, remove the plug from the socket, empty any remaining water from the tank, and allow to cool before storage.
- If you drop or severely knock your iron, this could cause internal damage even if the outside appears alright. Have it checked by a qualified electrician.
- It is recommended that you use up one beaker of water by operating your iron's steam and shot of steam functions before ironing any clothes, as some dripping may occur while your iron's steam system is activated.



## **ELECTRICAL REQUIREMENTS**

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING : The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**





Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

 
**WARNING: This appliance must be earthed.**

 
## **INSTRUCTIONS FOR USE**

### **Temperature guide**

Heat setting markings on the adjustable control dial of all Morphy Richards irons match those of the International Textile Care Labelling Code.

Symbol				
		(120°C Max) Cool	(160°C Max) Warm	(210°C Max) Hot
Control knob positions	Do not iron at all	●	●●	●●●
Fabric		Nylon, Acetates e.g. Acrilan Courtelle, Orlon Triacetates, e.g. Tricel/Polyester	Wool, Polyester mixtures e.g. Polyester/Cotton	Cotton, Linen Rayon, Rayon mixtures, e.g. Rayon/Linen
Ironing		Iron on wrong side if moisture required use damp cloth (Not Acetate)		Fabrics requiring this setting usually require steam pressing for heavy cotton, denim etc.
With water in tank		← Dry and spray →	← Steam/spray/shot of steam →	← Jet clean →
Without water in tank		← Dry ironing →		



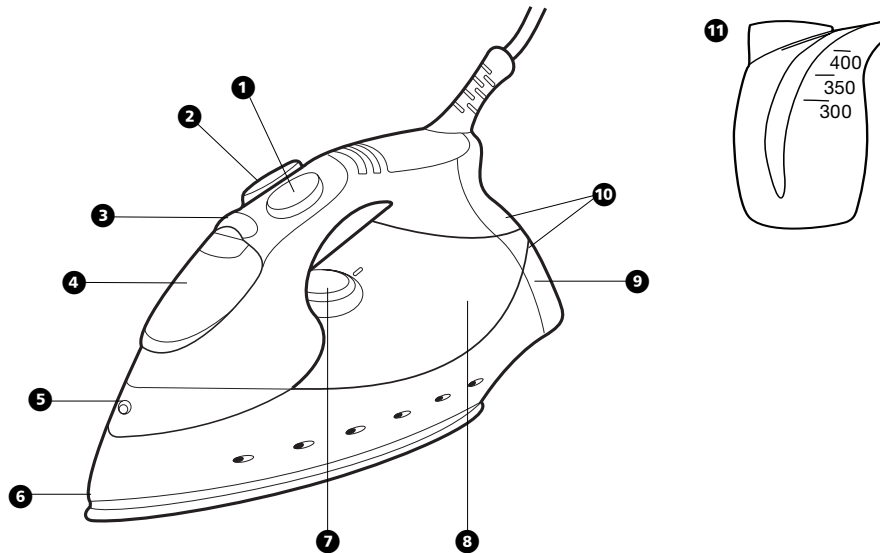

### COMPONENTS OF YOUR IRON

- ❶ Shot of steam button
- ❷ Spray button
- ❸ Variable steam control
- ❹ Filling hole with cap
- ❺ Spray nozzle
- ❻ Soleplate
- ❼ Illuminated temperature control dial
- ❽ Water tank
- ❾ Life long anti-scale
- ❿ Power on indicator lights - Auto energy shut-off indicator
- ⓫ Filling beaker

 
### BEFORE USE

Note: The steam facility should only be used on garments which are suitable for ironing at the 2 and 3 dot settings.

When ironing with the steam at the lower end of the steam band, the variable steam output ❸ should be set at the lower end of the steam range (see 'Variable steam' section).

Textiles and clothes are supposed to carry ironing instructions. If they don't, you should follow the fabric guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar area first.

If you turn the control dial down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.



## FILLING **A**

- 1 Make sure that the iron is not plugged in and then set the variable steam control **3** to the '0' position before filling the iron with water.
- 2 Open the fill cap and pour water through the filling hole **4** into the water tank **8**, using the beaker provided, one beaker full of water fills the tank (400ml). **A**  
After filling, replace the fill cap. In hard water areas, the use of distilled or demineralised water is recommended.
- 3 Always pour out the remaining water after use.

**Warning: When filling your iron with tap water, always use the beaker provided. Never fill directly under the tap.**

## Temperature control **B**

Plug in the iron and switch on. The 'power on' indicator lights **10**, situated in the back cover, will illuminate. Set the temperature control dial **B** to the temperature required, but don't start ironing immediately. If you wait a few minutes, the iron will stabilise at the required setting.

Your Morphy Richards iron is fitted with an indicator light **7** which will go on and off while you are ironing. This is perfectly normal as it shows that the iron is maintaining the heat setting you have chosen.

 
**It is always a good idea to begin with cool fabrics and work up to higher settings.**

**An iron heats up quicker than it cools down so you'll save time and electricity.**

## FEATURES OF YOUR IRON

### Temperature indicator light


The indicator light under the control knob shows that the iron is warming up. When the required temperature is reached, the light will go out and will cycle on-off during operation.

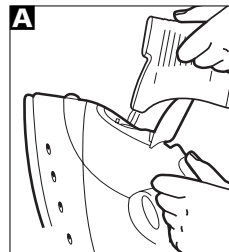

### Dry ironing


You can use your iron as a dry iron only. Make sure the variable steam control **3** is set to the '0' symbol.

 Any temperature setting may be used depending on the garment. The spray feature may be used provided there is water in the tank (see 'Filling' section). You do not need to put any water in the tank when dry ironing only.

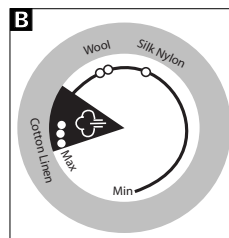

### Spray **C**

 Press the spray button **2** and aim the spray of water at stubborn creases. You can do this whilst dry ironing, providing there is water in the tank. When using the water spray it may be necessary to push the button a few times to get the spray pump primed.

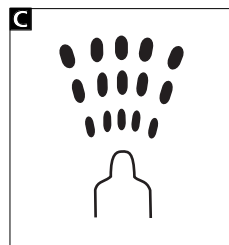



### Variable steam **D**


Fill the iron with water as described in 'Filling', and insert the plug into the electrical socket.

The steam output can be varied from low to high by sliding the variable steam control **D**. When using the iron at the bottom of the steam range, the steam output should be adjusted to the lowest setting.

The steam facility should only be used on garments which are suitable for ironing within the steam band.

   Steam uses additional energy. To save energy, only use steam when necessary.

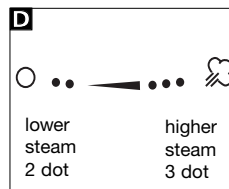

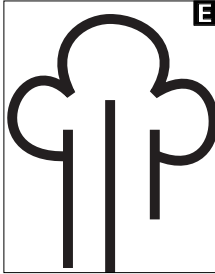


### **E Shot of steam E**

Press the shot of steam button **1** to obtain a burst of extra steam for ironing out creases in heavy material such as denim etc.

The shot of steam can be used whilst dry ironing, providing there is water in the tank, and the temperature control is set within the steam range.

Do not use shot of steam at temperatures below the steam range shown on the control.

 Note: For optimum steam quality, do not operate the shot more than three times in succession.

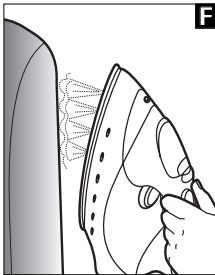

### **F Vertical steam**

Hold the iron in a vertical position between 1cm and 2cm away from the item **F**. Press the shot of steam button **1**, this will create vertical steam. This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings, etc.

Note: For optimum steam quality, do not operate the shot more than three times in succession.

### **No drip system**

Your iron is fitted with a no drip system which is designed to prevent water escaping from the soleplate when the iron is too cold.

During use, the no drip system may emit a loud click, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

### **Auto energy shut-off**

**Energy conscious iron with no compromise on performance...**

Your iron is fitted with the auto energy shut-off function, and will automatically shut down after a set period.

If the iron is left unattended in the horizontal position, it will shut down after one minute.

If it is left in the vertical position, it will shut down after 3 minutes. When this happens, the two 'power on' lights, situated in the back cover **10**, will flash to show that the iron is in power-off mode.

#### **It stops when you stop...**

To reactivate the iron, gently shake it until the 'power on' lights **10** stop flashing and remain on.

The iron will then start to heat back up to the temperature it is set to.

### **Life long anti-scale system**

The life long anti-scale system reduces scale deposits and helps prolong the life of the iron.

## MAINTENANCE

### Emptying and storing

When you have finished ironing, unplug your iron. Ensure that the variable steam control is set at the '0' position, lift up the fill cap and empty any remaining water out of the filling hole **G**.

Do not store in the box, but in an upright position **H**, so that any drops of water remaining cannot leak out and discolour the soleplate.

**IMPORTANT:** The flex can be damaged if wound too tightly around the iron after use. Make a loose loop with the flex and wrap it around the iron. The iron must be cool before winding the flex and storing on it's heel.

### Jet cleaning

Your iron has a built in cleaning system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits. The 'jet clean' should be operated after each period of ironing.

To operate, ensure that there is little water in the tank, place the iron on it's heel and turn the temperature control dial to the maximum setting. Wait for the beep, then unplug the iron and hold it about 6" (150mm) above the sink in the ironing position. Press the shot of steam button about 10 times in succession.

After this cleaning operation, empty out any remaining water.

**WARNING: Do not attempt to descale the soleplate with descaling products.**

### To clean a coated soleplate

 
In the unlikely event of any man-made fibre fusing to the soleplate, set the iron at the 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

Do not use scouring powder or solution as this could cause damage to the coating.



### To clean the exterior

Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

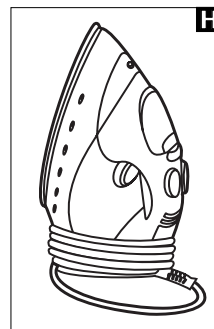

### Helpline

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly:

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

**UK Helpline 0844 871 0953**

**Replacement Parts 0844 873 0719**

**Ireland Helpline 1800 409 119**

## YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

### Model no.

### Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see 'Exclusions'), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the manufacturer's instructions. For example, kettles should have been regularly descaled.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations, or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

- 4 The appliance has been used for hire purposes or non domestic use.
  - 5 The appliance is second hand.
  - 6 Morphy Richards are not liable to carry out any type of servicing work under the guarantee.
  - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
  - This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**morphy richards®**

**The After Sales Division  
Morphy Richards Ltd**  
Mexborough, South Yorkshire,  
England, S64 8AJ

Helplines (office hours)  
UK 0844 871 0953  
Spare Parts 0844 873 0719  
Republic of Ireland 1800 409 119

RN40652 MUK Rev 1 04/08

For details of other products in the Morphy Richards range, please see our website . . .